

ASSEMBLY INSTRUCTIONS

Item No : QB-612


Description : QUEEN BED

Thank you for purchasing this quality product be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment

Step1:

A. Assembly side rails (C) with headboard (A) & footboard (B).

B. Assembly side rail bracket (F), footboard (B) to side rails (C) using bolt (1) and allen key (4).

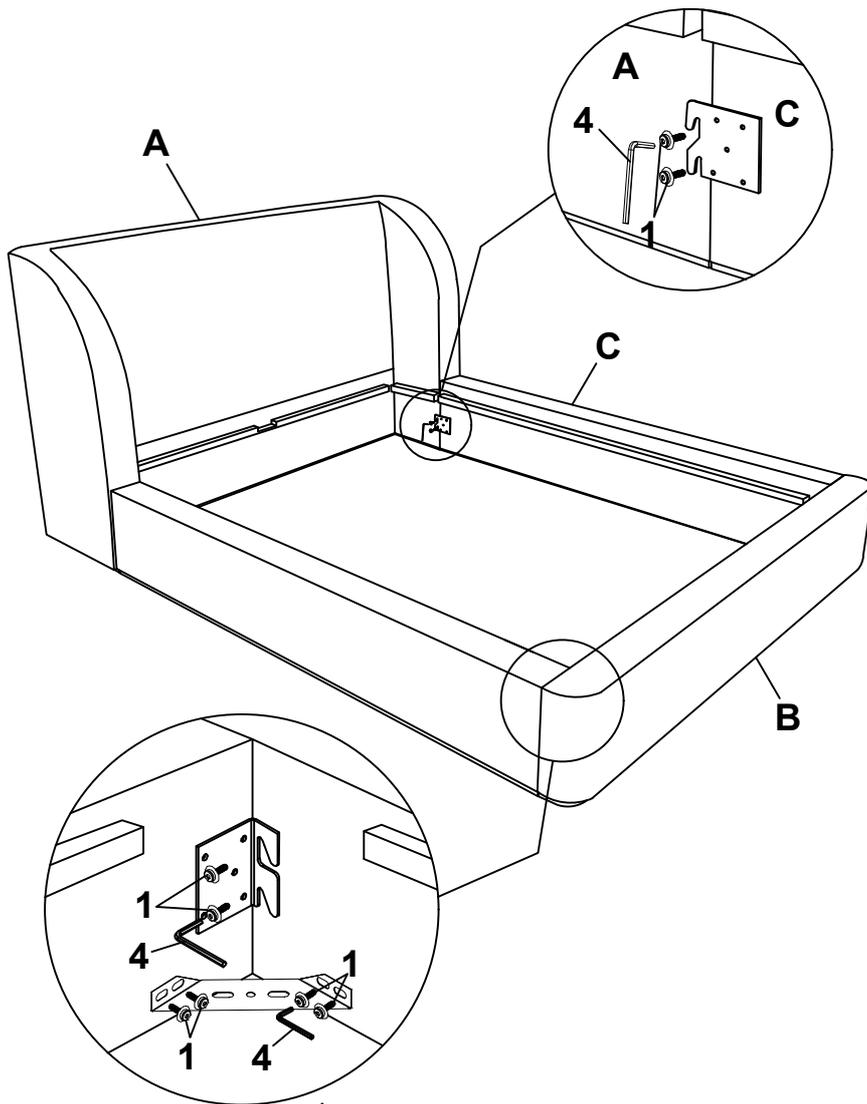

TOOLS REQUIRED (Not provided)


 Phillips Screwdriver

PARTS LIST:

NO	Description	Sketch	Quantity
A	Headboard		1PC
B	Footboard		1PC
C	Side Rails		2PCS
D	Center Wood Support		1PC
E	Support Legs		3PCS
F	Side Rail Bracket		2PCS
G	Slats		12PCS

HARDWARE LIST:

NO	Description	Sketch	Size	Quantity
1	Bolt + (Lock & Flat Washer)		M8 x 25mm	16PCS
2	Bolt + (Lock & Flat Washer)		M6 x 40mm	3PCS
3	Allen Key		M4	1PC
4	Allen Key		M5	1PC
5	Screw		M4 x 32mm	14PCS

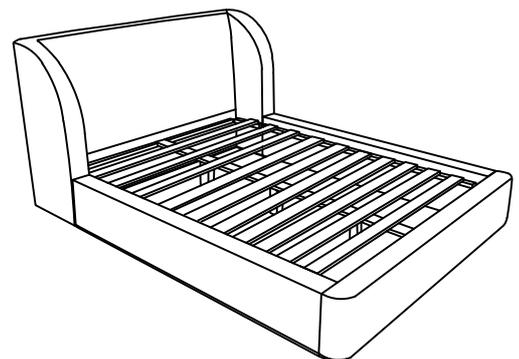

F	Side Rail Bracket			2PCS
1	Bolt + (Lock & Flat Washer)		M8 x 25mm	16PCS
4	Allen Key		M5	1PC

ASSEMBLY INSTRUCTIONS

Item No : QB-612

Description : QUEEN BED




Thank you for purchasing this quality product be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment

Step2:

A. Assembly support leg (E) to center wood support (D) by using bolts (2) and allen key(3).

B. Attach Slats (G) to center wood support (D). Then put the slats rolls on middle of bed.


The Glides under the support legs can be adjusted later to keep the slats level on uneven surfaces.

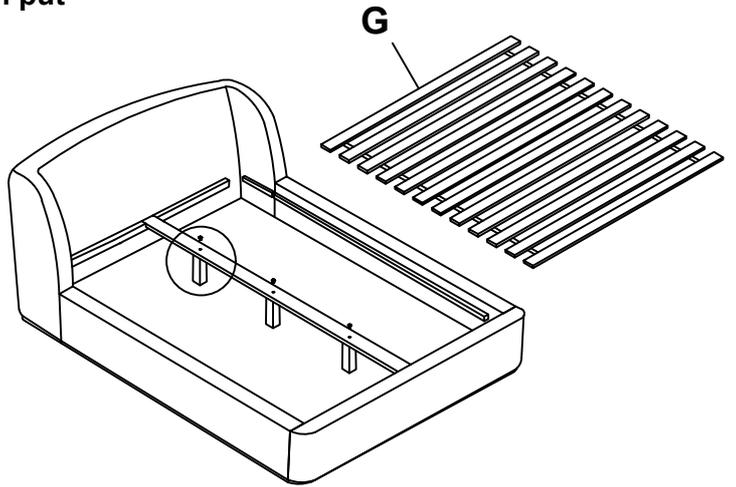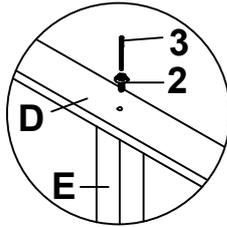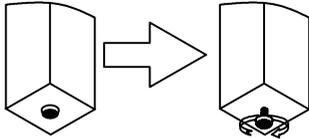

2	Bolt + (Lock & Flat Washer)		M6 x 40mm	3PCS
3	Allen Key		M4	1PC

Step3:

Secure slats (G) and center wood support (D) with screw (5) by philips head screwdriver (not included).

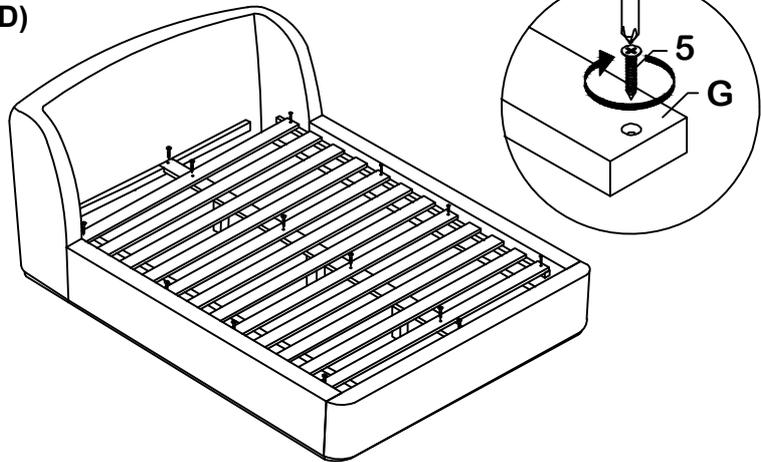

5	Screw		M4 x 32mm	14PCS
---	-------	---	-----------	-------

Completed assembly.

