


Assembly Instruction

Model: #521

Description: EK Bed


Thank you for your support our product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

Step 1:

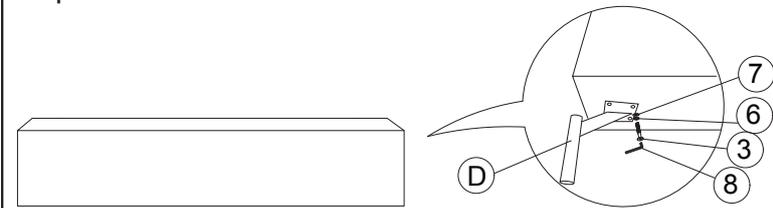


A. WHITE WOVEN TO COVER TO PREVENT DIRTY MARK. REMOVE THE FABRIC COVERS FROM THE BACK OF THE TWO BOX.
 B. TAKE OUT THE ALL PARTS.
 C. ATTACH FOOTBOARD LEG (D) TO FOOTBOARD (B) AND HEADBOARD (A).BY USING BOLTS (3), SPRING WASHER (6), LOCK WASHER (7) AND ALLEN KEY (8).

Step 2:

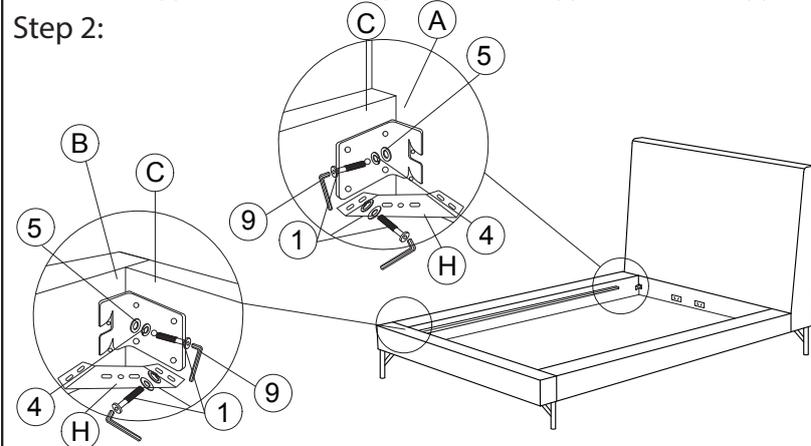


A. ASSEMBLE SIDE RAILS (C) TO HEADBOARD (A) AND FOOTBOARD (B), BY USING BOLTS (1), SPRING WASHER (4), LOCK WASHER (5) AND ALLEN KEY (9).
 B. ASSEMBLE SIDE RAIL BRACKET (H), FOOTBOARD (B) TO SIDE RAIL (C) AND HEADBOARD (A) TO SIDE RAIL (C) USING BY BOLTS (1), SPRING WASHER (4), LOCK WASHER (5), AND ALLEN KEY (9).

Step 3:

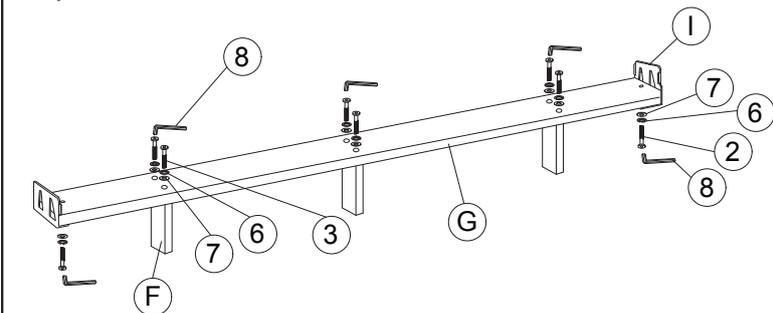

A. ASSEMBLE SUPPORT LEG (F) TO CENTER WOOD SUPPORT (G) BY USING BOLTS (3) , SPRING WASHER (6), LOCK WASHER (7) AND ALLEN KEY (8).
 B. ASSEMBLE CENTER WOOD BRACKET (I) TO CENTER WOOD SUPPORT (G) BY USING BOLTS (2), SPRING WASHER (6), LOCK WASHER (7) AND ALLEN KEY (8).

Step 4:

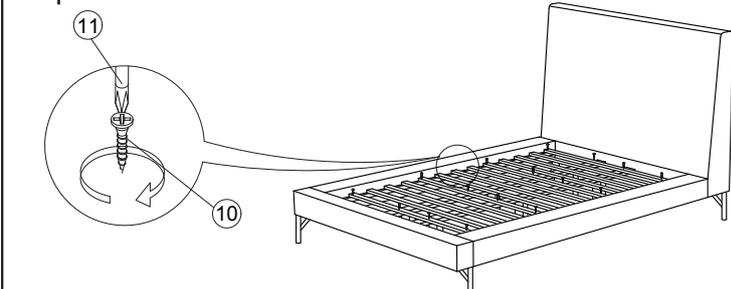


A. ATTACH SLATS (E) TO WOODEN CENTER SUPPORT (G). THEN PUT SLATS ROLLS ON MIDDLE OF BED.
 B. SECURE SLATS WITH SCREW (10) BY PHILIPS HEAD SREWDRIVER (11) (not included).

Part List			
No.	Description	Sketch	Qty.
A	Headboard		1 Pc
B	Footboard		1 Pc
C	Side Rail		2 Pcs
D	Footboard Leg		4 Pcs
E	Slats		14 Pcs
F	Support Leg		6 Pcs
G	Center Wood Support		2 Pcs
H	Side Rail Bracket		4 Pcs
I	Center Wood Bracket		4 Pcs

Part List				
No.	Description	Sketch	Size	Qty.
1	Bolt		M8 x 25mm	24 Pcs
2	Bolt		M6 x 25mm	4 Pcs
3	Bolt		M6 x 35mm	28 Pcs
4	Spring Washer		M8	24 Pcs
5	Lock Washer		M8	24 Pcs
6	Spring Washer		M6	32 Pcs
7	Lock Washer		M6	32 Pcs
8	Allen Key		M4	1 Pc
9	Allen Key		M5	1 Pc
10	Screw		M4 x 32mm	16 Pcs
11	Philips Head Srewdriver		Not Included	

FINISHED

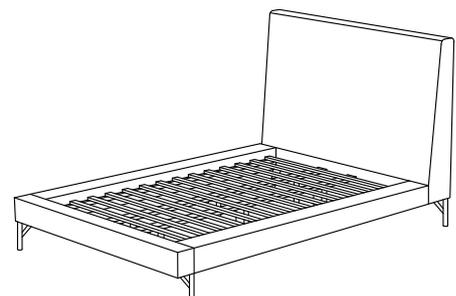

Made In Malaysia