


Assembly Instruction

Model: #1020B

Description: MQB & MKB & MCKB

Thank you for your support of our product. Be sure to check all packing material carefully for small parts that might have come loose during shipment.



Part List					Part List			
No.	Description	Sketch	Size	Qty.	No.	Description	Sketch	Qty.
1	Bolt + (Lock & Flat Washer)		M6 x 25mm	10 Pcs	A	Headboard		1 Pc
2	Bolt + (Lock & Flat Washer)		M8 x 25mm	28 Pcs	B	Footboard		1 Pc
3	Bolt + (Lock & Flat Washer)		M8 x 35mm	8 Pcs	C	Side Rail (Left & Right) With Lifting Mechanism & Pistons		1 set
4	Allen Key		M4	1 Pc	D	Legs		4 Pcs
5	Allen Key		M5	1 Pc	E	Top Panel (Front)		1 Pc
6	Stud Bolt		M6	2 Pcs	F	Top Panel (Back)		1 Pc
					G	Center Panel		1 Pc
					H	Bottom Panel		2 Pcs
					I	Metal Bracket		1 Pc
					J	Side Rail Bracket		4 Pcs

Step 1

1.1 - REMOVE WHITE WOVEN COVER THAT HELPS KEEP ITEMS CLEAN FROM BOTH CARTONS.

1.2 - TAKE OUT ALL PARTS.



1.3 - ATTACH LEGS (D) TO HEADBOARD (A) AND FOOTBOARD (B) WITH BOLT (3) AND ALLEN KEY (5).

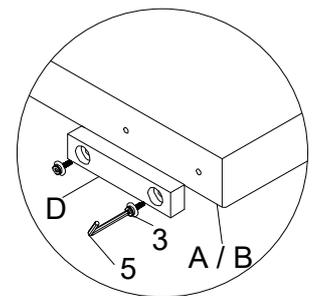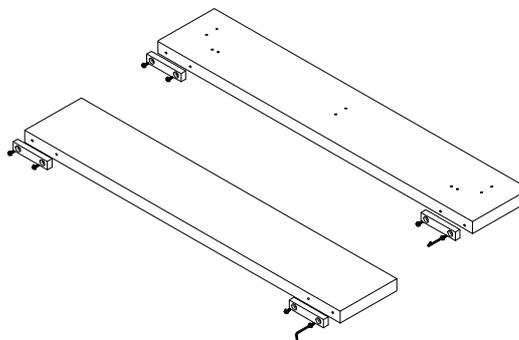

Step 2

2.1 - ASSEMBLY SIDE RAILS (C) TO HEADBOARD (A) WITH BOLT (2) AND ALLEN KEY (5).

2.2 - PLEASE DO NOT TIGHTEN THE BOLT.

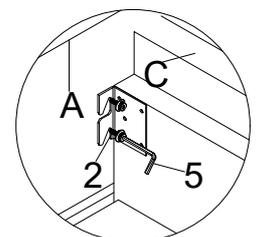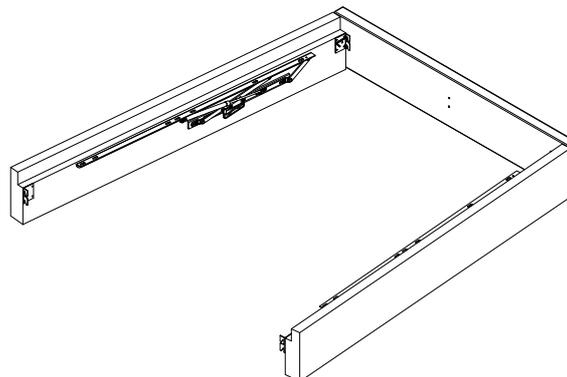


Assembly Instruction

Model: #1020B

Description: MQB & MKB & MCKB

Step 3


3 - PUT THE BOTTOM PANEL (H).

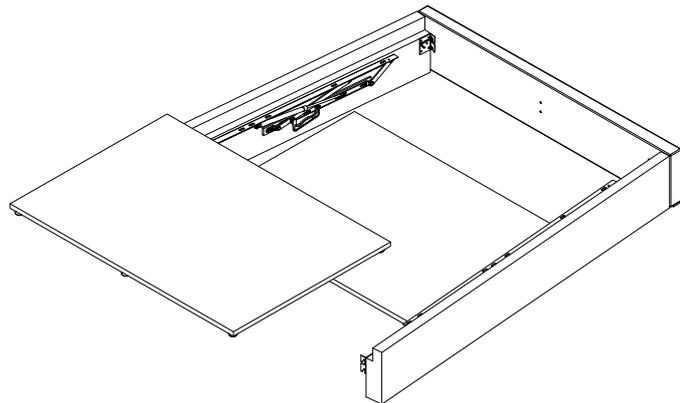

Step 4

4.1 - ASSEMBLY CENTER PANEL (G) TO HEADBOARD (A) WITH BOLT (2) AND ALLEN KEY (5).



4.2 - PLEASE DO NOT TIGHTEN THE BOLT.

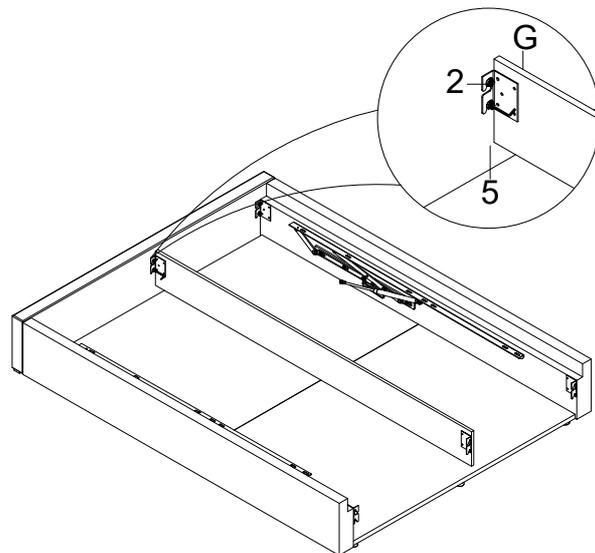

Step 5



5.1 - ASSEMBLY FOOTBOARD (B) TO SIDE RAILS (C), CENTER PANEL (G) WITH BOLT (2) AND ALLEN KEY (5).

5.2 - TIGHTEN THE BOLT (STEP 2), (STEP 4) AND (STEP 5).

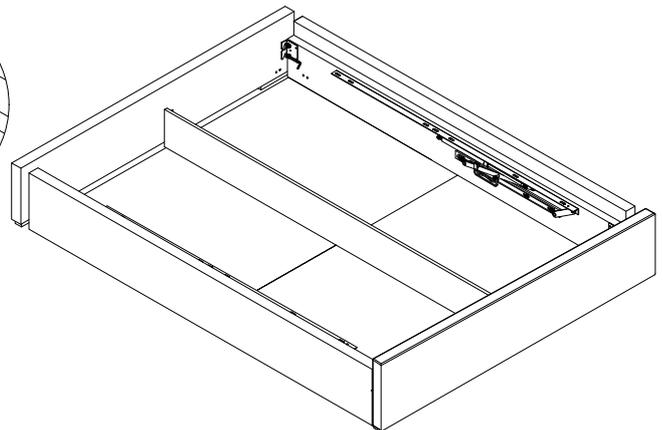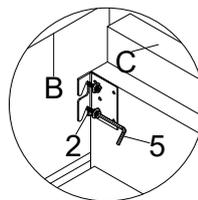

Step 6

6.1 - ASSEMBLY SIDE RAIL BRACKET (J), FOOTBOARD (B) TO SIDE RAILS (C) & HEADBOARD (A) TO SIDE RAILS (C) USING BOLT (2) AND ALLEN KEY (5).

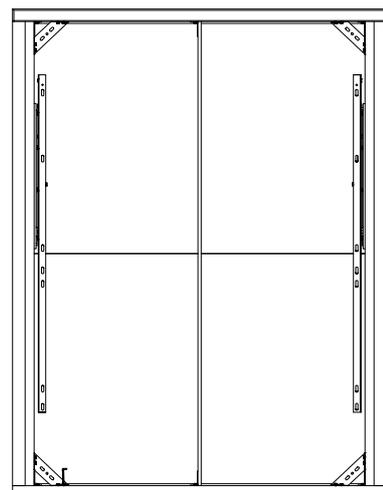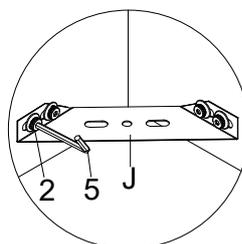

Assembly Instruction

Model: #1020B


Description: MQB & MKB & MCKB

Step 7

7.1 - LOOSEN THE HEX NUT ON THE LIFTING MECHANISM AND TAKE OUT THE SAFETY LOCK.

7.2 - ASSEMBLY THE PISTONS AND SAFETY LOCK. (A SAFETY LOCK TO KEEP THE STORAGE BED OPEN. ESPECIALLY USEFUL WHEN YOUR MATTRESS IS HEAVY. ACCESS YOUR STORAGE EFFORTLESSLY.)


7.3 - TIGHTEN THE HEX NUT.

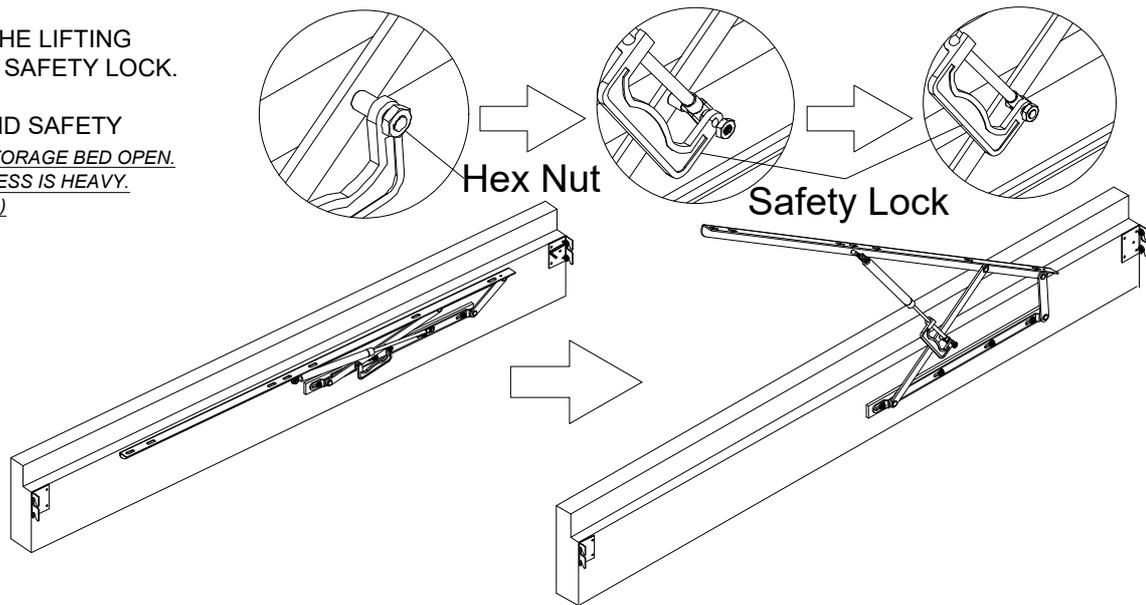

Step 8

8.1 - ASSEMBLY THE STUD BOLT (6) TO TOP PANEL (FRONT) (E).


8.2 - ASSEMBLY THE METAL BRACKET (I) TO TOP PANEL (FRONT) (E) WITH BOLT (1) AND ALLEN KEY (4).

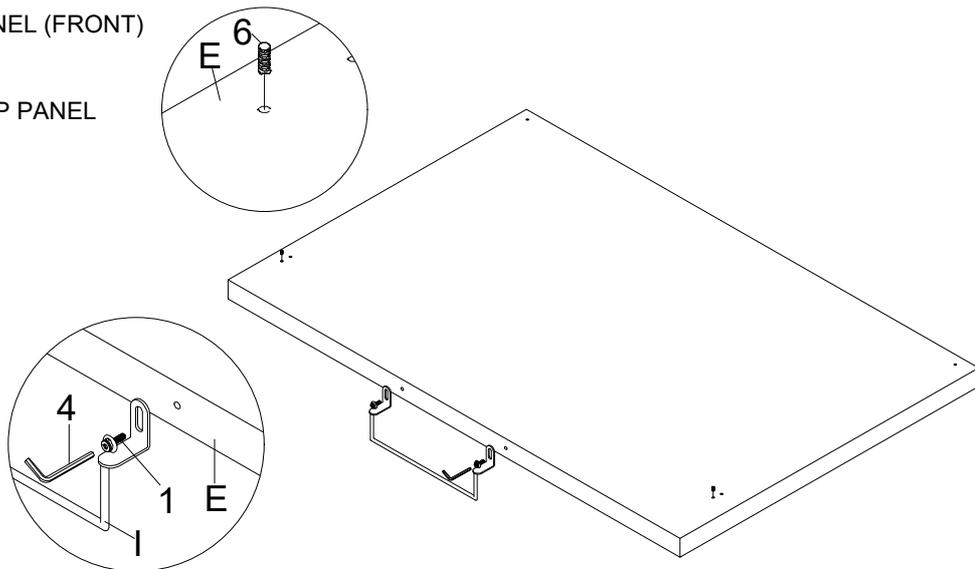

Step 9

9.1 - ASSEMBLY THE TOP PANEL (FRONT) (E) TO THE LIFTING MECHANISM WITH BOLT (1) AND ALLEN KEY (4). (THE PURPOSE STUD BOLT IS LET THE TOP PANEL (FRONT) HANG ON THE LIFTING MECHANISM AND EASIER FOR ASSEMBLY THE OTHER BOLT.)

9.2 - TIGHTEN THE BOLT AFTER ALL THE BOLT MEET THE HOLES.

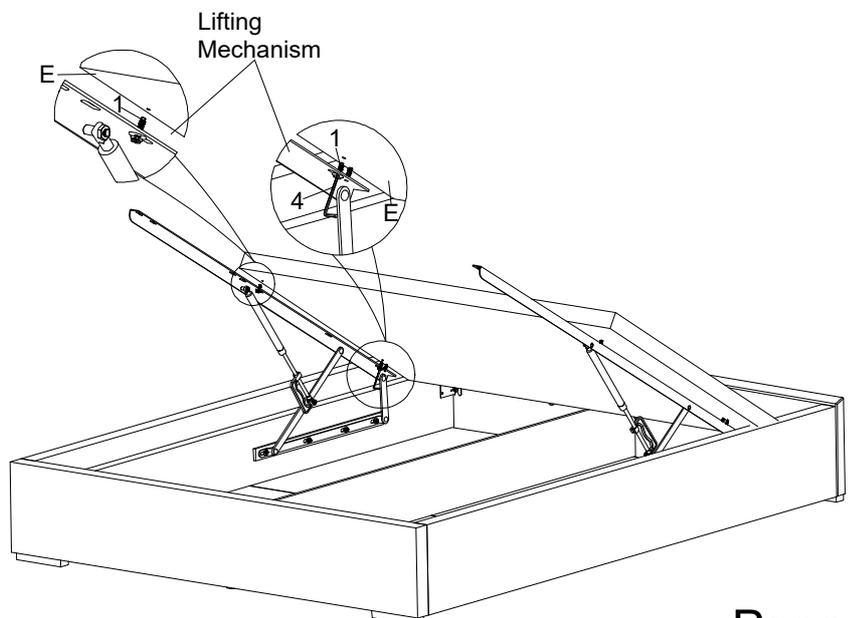


Assembly Instruction

Model: #1020B

Description: MQB & MKB & MCKB


Step 10

10.1 - ASSEMBLY THE TOP PANEL (BACK) (F) TO LIFTING MECHANISM WITH BOLT (1) AND ALLEN KEY (4).

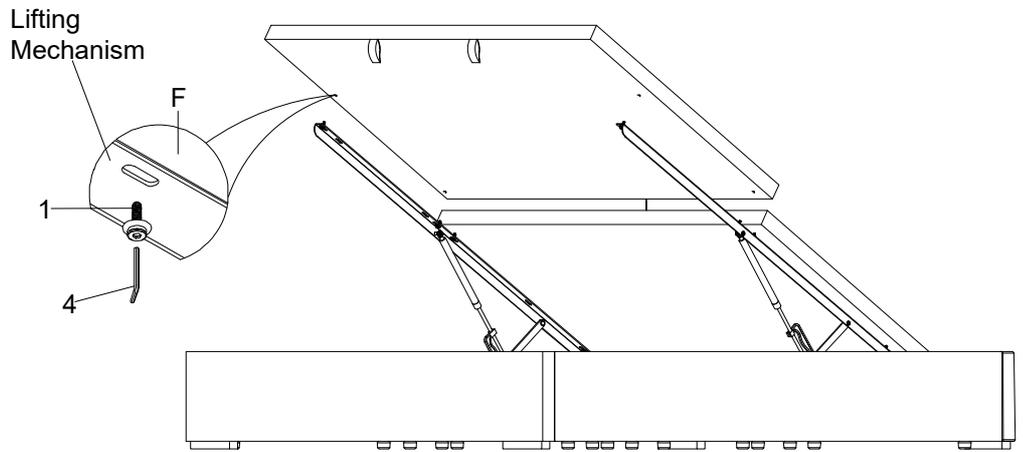

Step 11

11 - UNLOCK THE SAFETY LOCK AND PULL DOWN THE TOP PANEL (E + F).

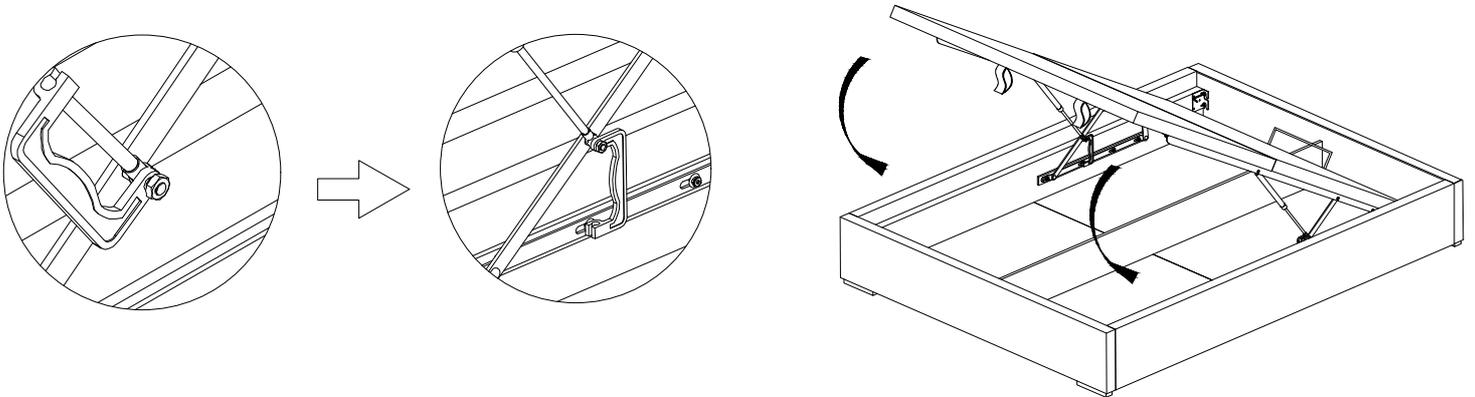

COMPLETED

