


ASSEMBLY INSTRUCTIONS

Item No : YFB-394 / YTB-394
Description : FULL BED / TWIN BED

Thank you for purchasing this quality product be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment

Step1:

A. Assembly HB (A) & FB (B) with legs (H)

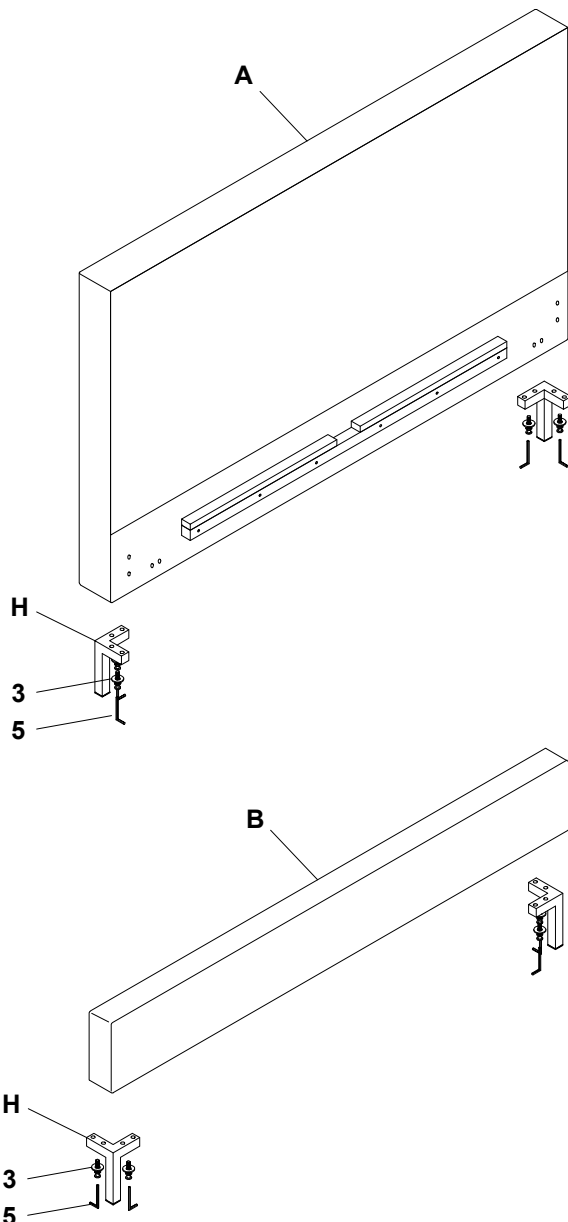

3	Bolt + (Lock & Flat Washer)		M8 x 45mm	8PCS
5	Allen Key		M5	1PC

TOOLS REQUIRED (Not provided)




Phillips Screwdriver

PARTS LIST:

A	Headboard		1PC
B	Footboard		1PC
C	Side rail		2PCS
D	Center Wood Support		1PC
E	Support Leg		3PCS
F	Side Rail Bracket		4PCS
G	Slat		12PCS
H	Legs		4PCS

HARDWARE LIST:

No	Description	Sketch	Size	Quantity
1	Bolt + (Lock & Flat Washer)		M8 x 25mm	24PCS
2	Bolt + (Lock & Flat Washer)		M6 x 35mm	3PCS
3	Bolt + (Lock & Flat Washer)		M8 x 45mm	8PCS
4	Allen Key		M4	1PC
5	Allen Key		M5	1PC
6	Screw		M4 x 32mm	14PCS

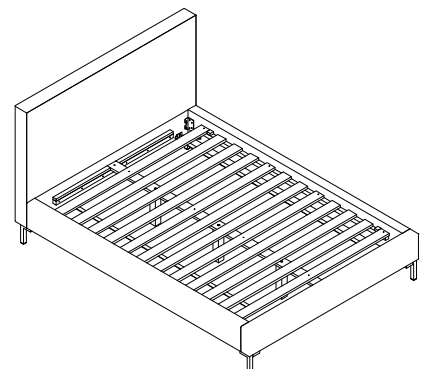

ASSEMBLY INSTRUCTIONS


Item No : YFB-394 / YTB-394
Description : FULL BED / TWIN BED

Thank you for purchasing this quality product be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment

Step2:



- A. Assembly side rail (C) with HB (A) & FB (B).
B. Assembly side rail bracket (F), footboard (B) to Side Rails & headboard (A) to side rails (C) using bolt (1) and allen key (5)

1	Bolt + (Lock & Flat Washer)		M8 x 25mm	24PCS
5	Allen Key		M5	1PC
F	Side Rail Bracket			4PCS

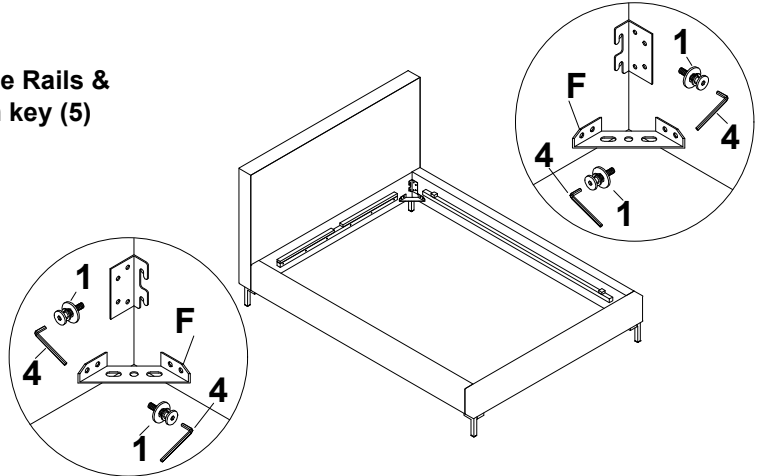

Step3:

- A. Assembly center wood support (D) to headboard (A) and footboard (B) using screw (6) by philips head screwdriver.(not included).
B. Assembly support leg (E) to center wood support (D) by using bolts (2) and allen key(4).
C. Attach Slats (G) to wooden center support (D). Then put the slats rolls on middle of bed.
D. Secure slats with screw (6) by philips head screwdriver.(not included).

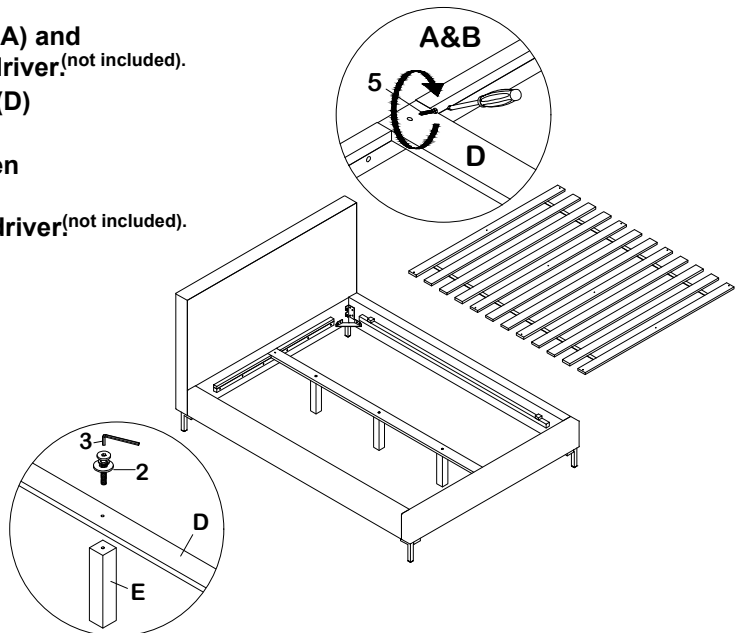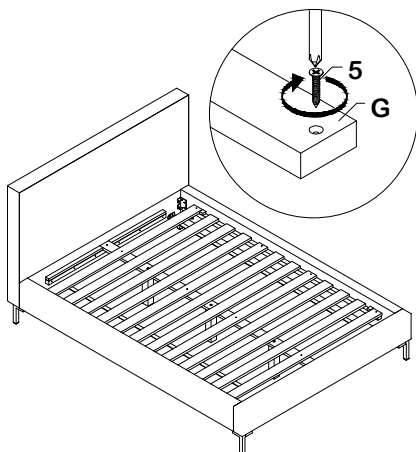

2	Bolt + (Lock & Flat Washer)		M6 x 35mm	3PCS
4	Allen Key		M4	1PC
6	Screw		M4 x 32mm	14PCS

Step4: Completed assembly.

