

ASSEMBLY INSTRUCTIONS


Item No : QB-687

Description : QUEEN BED


Thank you for purchasing this quality product be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment

STEP 1: Insert JCBB(2), spring washer(3), flat washer(4).
Please **DO NOT TIGHTEN JCBB(2)** at this step.

2	JCBB M8 x 20mm		8pcs
3	Spring Washer M8		8pcs
4	Flat Washer M8		8pcs

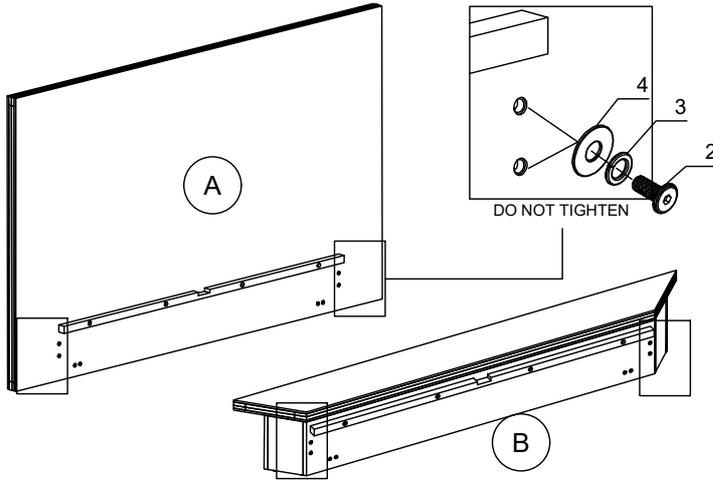

STEP 2: Assemble Side Rail (C), and Footboard (B) and Headboard (A).
Please **DO NOT TIGHTEN JCBB (2)** at this step.

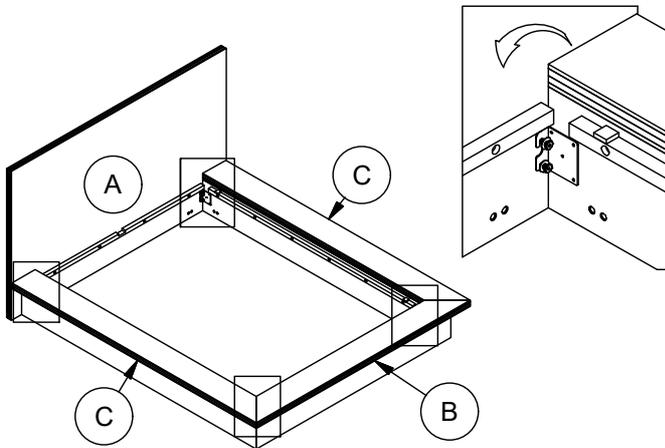

TOOLS REQUIRED (Not provided)




Phillips Screwdriver

PARTS LIST:

A	HEADBOARD		1PC
B	FOOTBOARD		1PC
C	SIDE RAIL (L/R)		2PCS
D	SLAT ROLL		1SET
E	SLAT SUPPORT		1PC
F	VERTICAL LEG		3PCS

PARTS LIST:

No	Description	Sketch	Quantity
1	BRACKET		4pcs
2	JCBB BOLT M8 x 20mm		28pcs
3	Spring Washer M8		28pcs
4	Flat Washer M8		28pcs
5	Screw M4 x 32mm		28pcs
6	Alley Key M5		1pc
7	Straight Bracket		2pcs

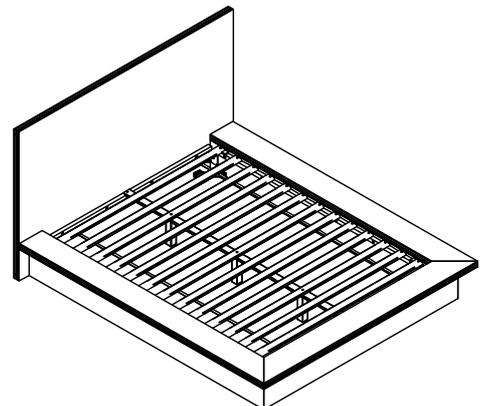

ASSEMBLY INSTRUCTIONS



Item No : QB-687

Description : QUEEN BED

Thank you for purchasing this quality product be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment

STEP 3 : Secure Side Rail (C) and Footboard (B) by using straight bracket (7)
Please make sure the cap of the Side Rail (C) and Footboard (B) is aligned before tightening the JCBB (2).



2	JCBB M8 x 20mm		4pcs
3	Spring Washer M8		4pcs
4	Flat Washer M8		4pcs
6	Allen Key M5		1pc
7	Straight Bracket		2pcs

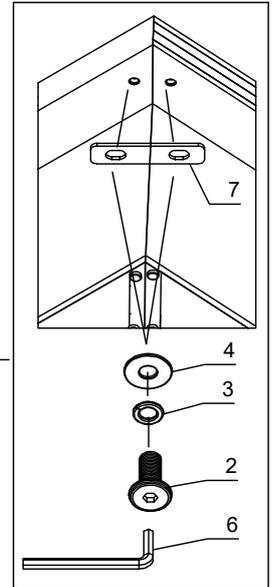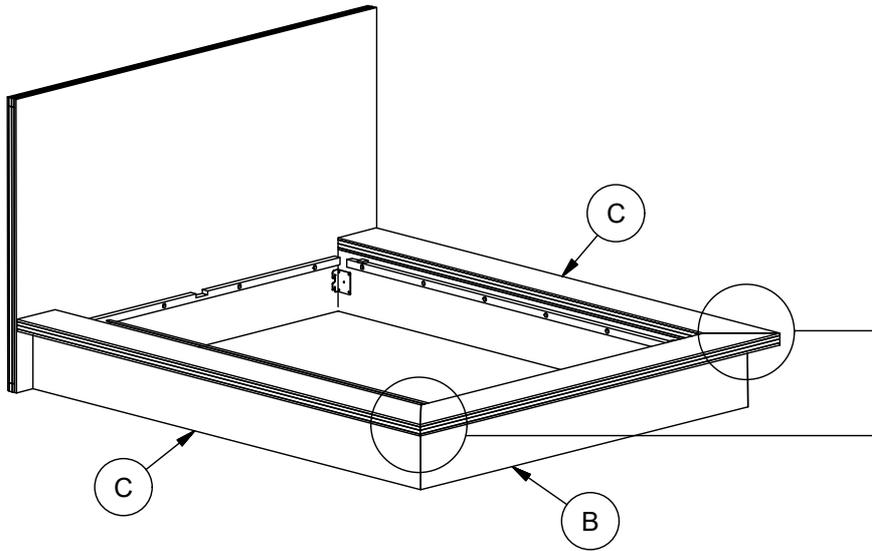

STEP 4.1 : Tighten JCBB (2) for Footboard (B) first and continue with Headboard (A).

STEP 4.2 : Assemble bracket to the Headboard(A), Footboard(B), and Side Rail(C).

1	Bracket		4pcs
2	JCBB M8 x 20mm		16pcs
3	Spring Washer M8		16pcs
4	Flat Washer M8		16pcs
6	Allen Key M5		1pc

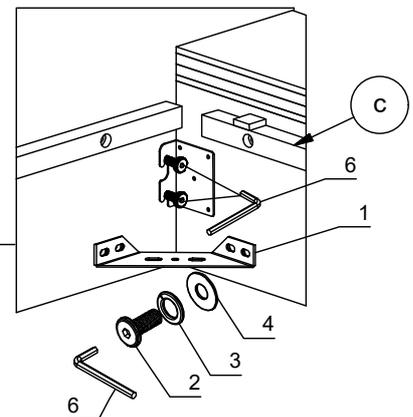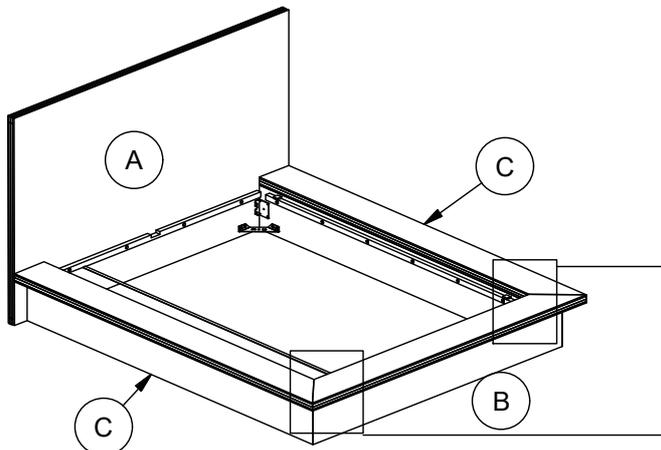


ASSEMBLY INSTRUCTIONS

Item No : QB-687

Description : QUEEN BED

Thank you for purchasing this quality product be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment

STEP 5 : Assemble Vertical Leg(F) & Slat Support(E) to the Slat Roll(D)

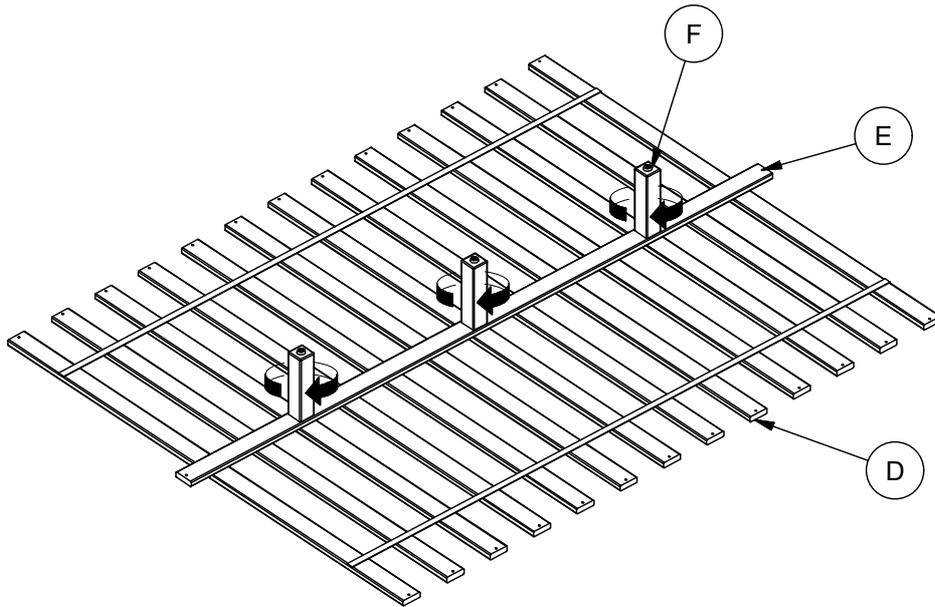

STEP 6 : Attach Slat Roll (D) to the Side Rail (C) and secure Slat Roll(D) with screw(5) by using phillips screwdriver

5	Screw M4 x 32mm		28pcs
---	-----------------	---	-------

