


ASSEMBLY INSTRUCTIONS

Item No : MQB-394

Description : QUEEN BED

Thank you for purchasing this quality product be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment

Step1: Assembly HB (A) & FB(B) with Leg (F).

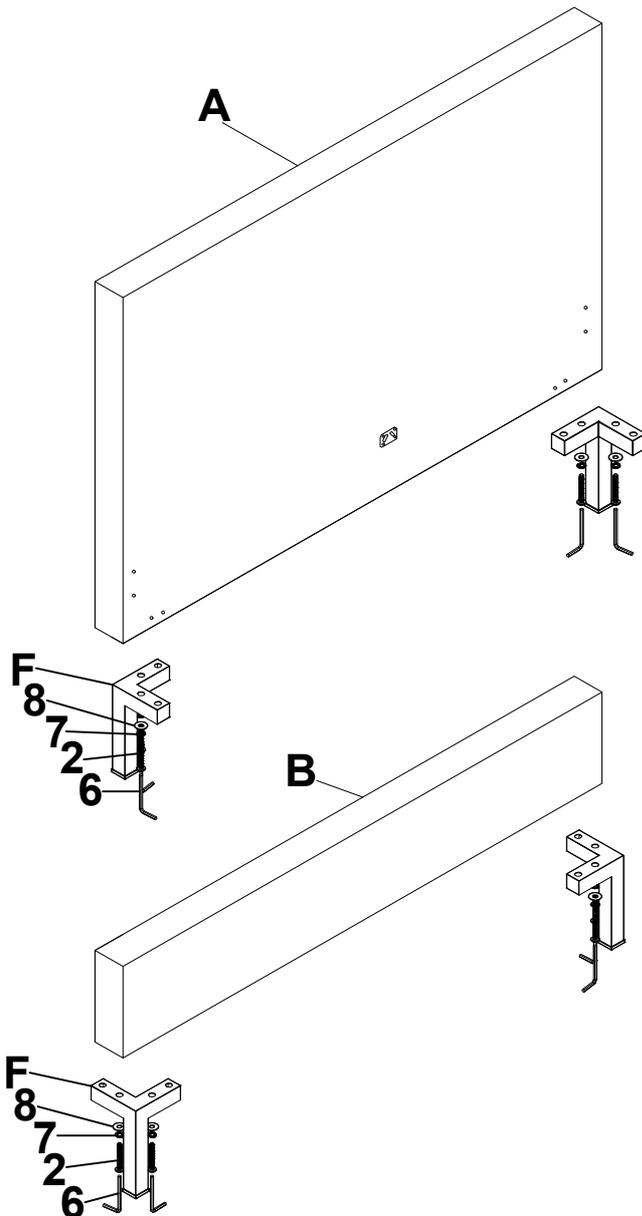

TOOLS REQUIRED (Not provided)

 Phillips Screwdriver


PARTS LITS:

Part No	Description	Sketch	Quantity
A	Headboard		1PC
B	Foodboard		1PC
C	Side Rail		2PCS
D	Center Wood Support		1PC
E	Support Leg		3PCS
F	Legs		4PCS
G	Slat		14PCS
H	Side Rail Bracket		4PCS
I	Center Wood Bracket		2PCS

HARDWAER LITS:

No	Description	Sketch	Size	Quantity
1	Bolt		M8 x 25mm	24PCS
2	Bolt		M8 x 45mm	8PCS
3	Bolt		M6 x 25mm	2PCS
4	Bolt		M6 x 35mm	6PCS
5	Allen Key		M4	1PC
6	Allen Key		M5	1PC
7	Spring Washer		M8	32PCS
8	Flat washer		M8	32PCS
9	Spring Washer		M6	8PCS
10	Flat washer		M6	8PCS
11	Screw		M4 x 32mm	12PCS

2	Bolt		M8 x 45mm	8PCS
6	Allen Key		M5	1PC
7	Spring Washer		M8	8PCS
8	Flat washer		M8	8PCS

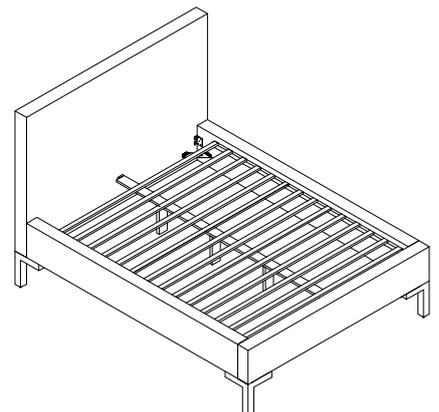

ASSEMBLY INSTRUCTIONS

Item No : MQB-394

Description : QUEEN BED


Thank you for purchasing this quality product be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment

Step2:

A. Assembly side rail (C) with HB (A) & FB(B).

B. Assembly side rail bracket (H), footboard (B) to Side Rails & headboard (A) to side rails (C) using bolt (1), spring washer (7), lock washer (8) & allen key (6).

1	Bolt		M8 x 25mm	24PCS
6	Allen Key		M5	1PC
7	Spring Washer		M8	24PCS
8	Flat washer		M8	24PCS
H	Side Rail Bracket			4PCS

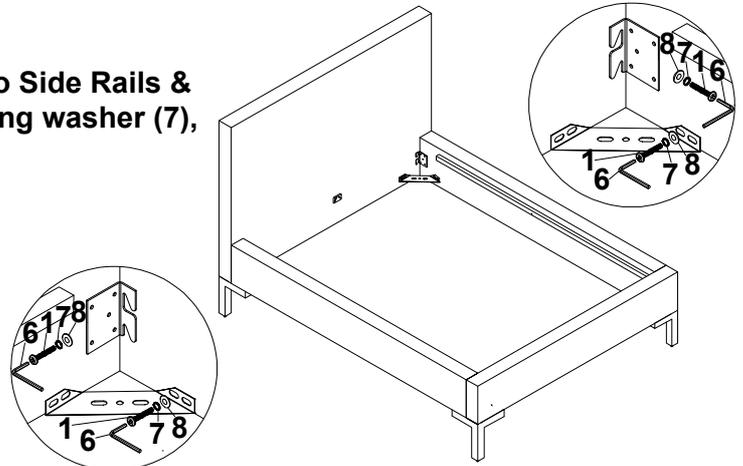

Step3:


A. Assembly center wood bracket (I) to center wood support (D) by using bolts (3), spring washer (9), lock washer (10) and allen key (5).

B. Assembly support leg (E) to center wood support (D) by using bolts (4), spring washer (9), lock washer (10), and allen key(5).

C. Attach Slats (G) to wooden center support (D). Then put the slats rolls on middle of bed.

D. Secure slats with screw (11) by philips head screwdriver (not included).

3	Bolt		M6 x 25mm	2PCS
4	Bolt		M6 x 35mm	6PCS
5	Allen Key		M4	1PC
11	Screw		M4 x 32mm	12PCS
13	Center Wood Bracket			2PCS

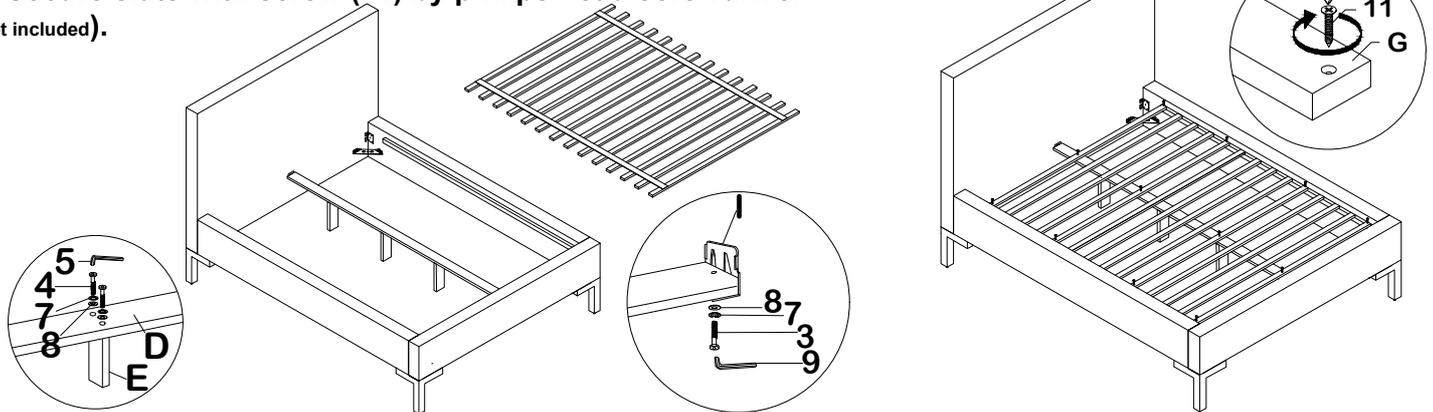

Step5: Completed assembly.

