


ASSEMBLY INSTRUCTIONS

Item No : MQB-589

Description : QUEEN BED

Thank you for purchasing this quality product be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment

Step1: Assembly legs (F) to headboard (A) and footboard (B) by using bolt (2) and allen key (5).

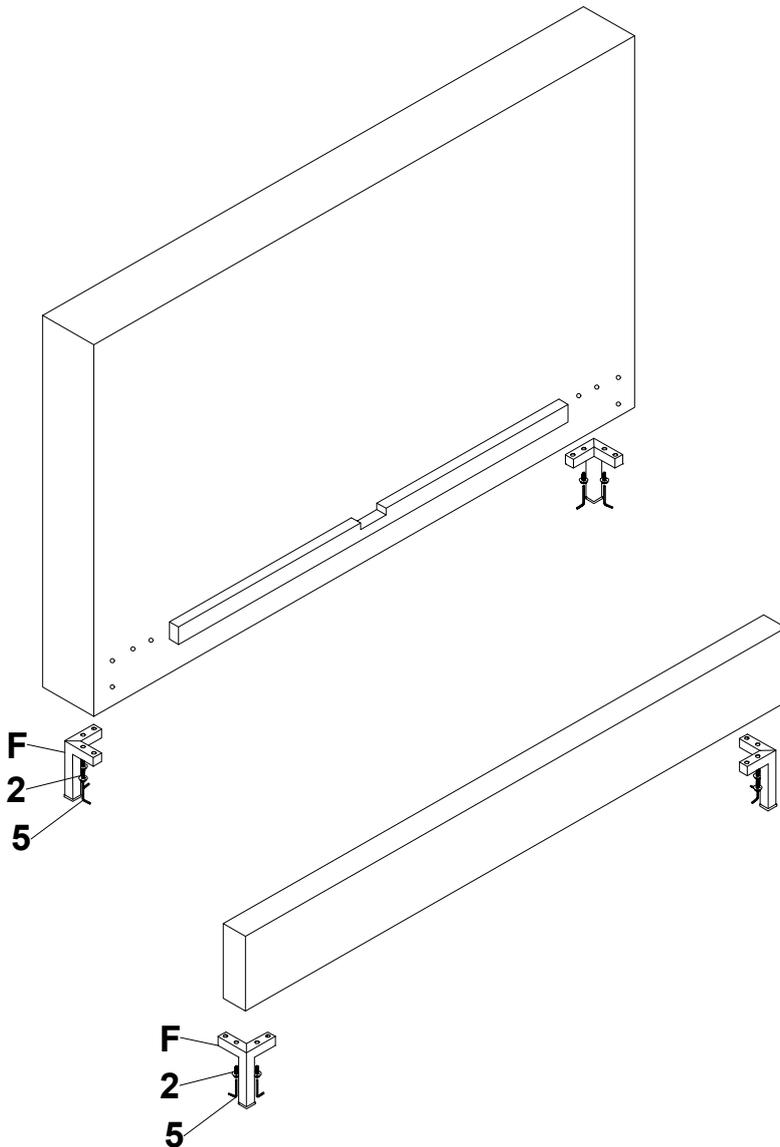

TOOLS REQUIRED (Not provided)


 **Phillips Screwdriver**

PARTS LIST:

Part No	Description	Sketch	Quantity
A	Headboard		1PC
B	Footboard		1PC
C	Side Rails		2PCS
D	Center Wood Support		1PC
E	Support Legs		3PCS
F	Legs		4PCS
G	Slats		10PCS
H	Side Rail Bracket		4PCS

HARDWARE LIST:

No	Description	Sketch	Size	Quantity
1	Bolt + (Lock & Flat Washer)		M8 x 25mm	24PCS
2	Bolt + (Lock & Flat Washer)		M8 x 45mm	8PCS
3	Bolt + (Lock & Flat Washer)		M6 x 35mm	3PCS
4	Allen Key		M4	1PC
5	Allen Key		M5	1PC
6	Screw		M4 x 32mm	14PCS

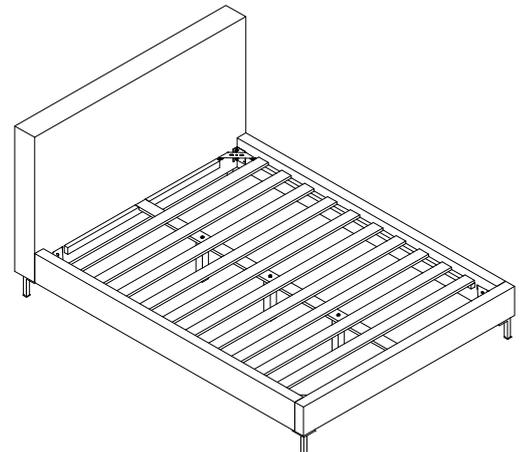

2	Bolt + (Lock & Flat Washer)		M8 x 45mm	8PCS
5	Allen Key		M5	1PC

ASSEMBLY INSTRUCTIONS


Item No : MQB-589

Description : QUEEN BED

Thank you for purchasing this quality product be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment

Step2:

- A. Assembly side rails (C) with headboard (A) & footboard (B).
- B. Assembly side rail bracket (H), footboard (B) to side rails (C) & headboard (A) to side rails (C) using bolt (1) and allen key (5).


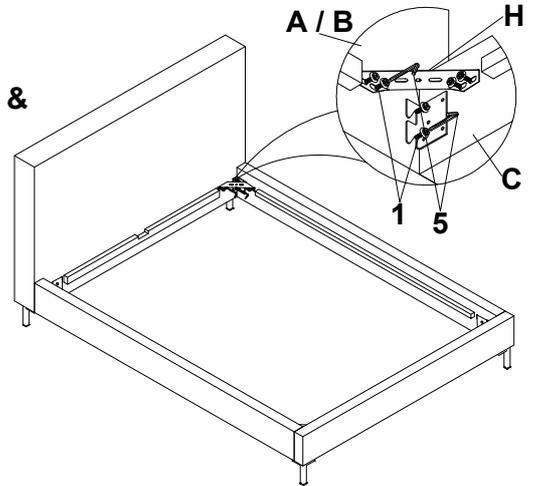


1	Bolt + (Lock & Flat Washer)		M8 x 25mm	24PCS
5	Allen Key		M5	1PC
H	Side Rail Bracket			4PCS

Step3:

- A. Assembly support legs (E) to center wood support (D) by using bolts (3) and allen key(4).
- B. Attach Slats (G) to center wood support (D). Then put the slats rolls on middle of bed.
- C. Secure slats (G) and center wood support (D) with screw (6) by philips head screwdriver (not included).

3	Bolt + (Lock & Flat Washer)		M6 x 35mm	3PCS
4	Allen Key		M4	1PC
6	Screw		M4 x 32mm	14PCS

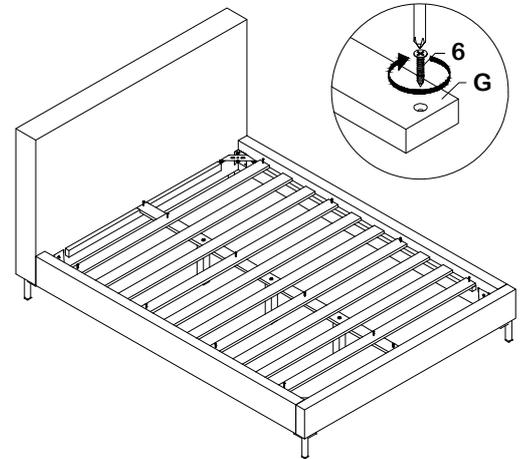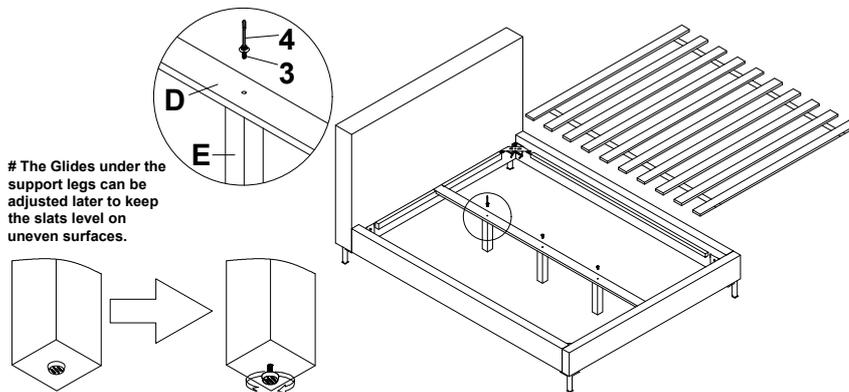

Completed assembly.

