


ASSEMBLY INSTRUCTIONS

Item No :QB/KB/CKB- 802

Description : QUEEN BED

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

Step 1 : Assembly side rail(C) with HB(A) & FB(B).

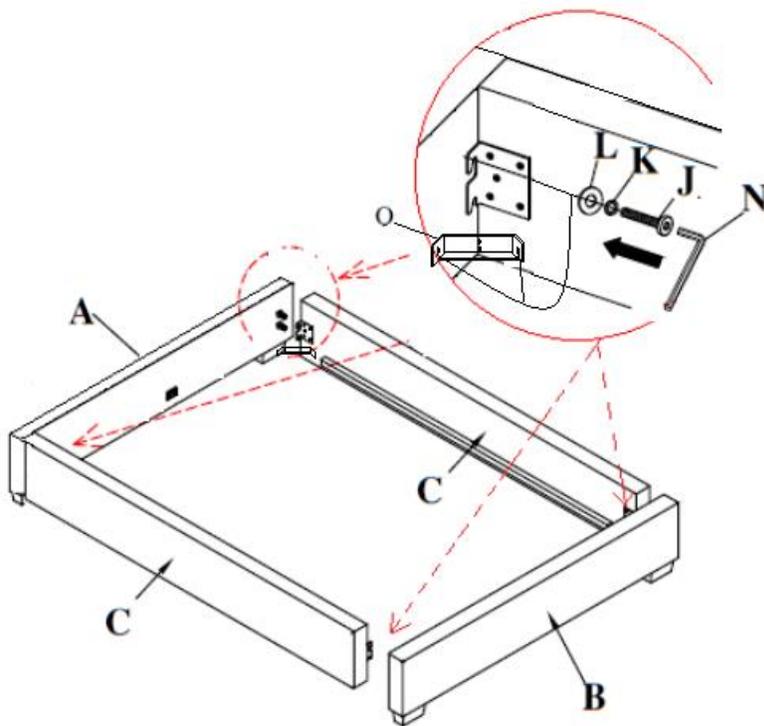

TOOLS REQUIRED (Not provided)

 Phillips Screwdriver

A	Headboard		1PC
B	Footboard		1PC
C	Side Rail		2PCS
D	Center Rail		1PC
E	Center Rail Support Leg		4PCS
F	Slat		1PC

HARDWARE LIST:

No.	Description	Sketch	Size	Quantity
J	Bolt		$\varnothing\frac{5}{16}$ "*1-1/2"	16PCS
K	Spring Washer		$\varnothing\frac{5}{16}$ "	16PCS
L	Flat Washer		$\varnothing\frac{5}{16}$ "	16PCS
M	Screw		$\varnothing 8$ *3/4"	4PCS
N	Allen Key		M4	1PC
Q	Screw		$\varnothing 8$ *2-3/8"	24PCS
P	Bolt		$\varnothing\frac{1}{4}$ "*1-1/2"	8PCS
O	Metal corner			4PCS

J	Bolt		$\varnothing\frac{5}{16}$ "*1-1/2"	16PCS
K	Spring washer		$\varnothing\frac{5}{16}$ "	16PCS
L	Flat washer		$\varnothing\frac{5}{16}$ "	16PCS
N	Allen key		M4	1PC




ASSEMBLY INSTRUCTIONS

Item No :QB/KB/CKB-802

Description : QUEEN BED




Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

Step 2 : Assembly center rail(D) with HB(A) & FB(B) .

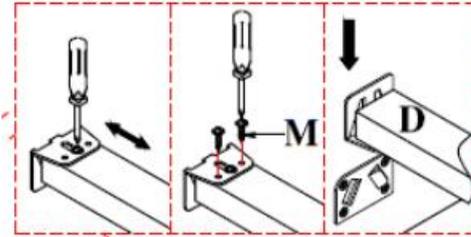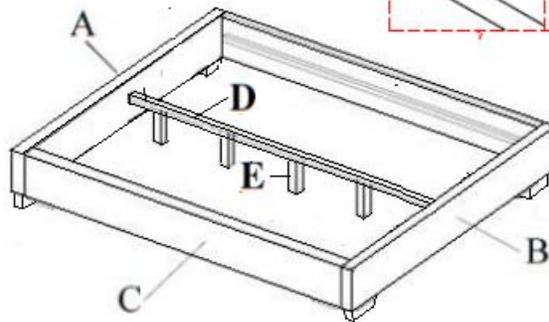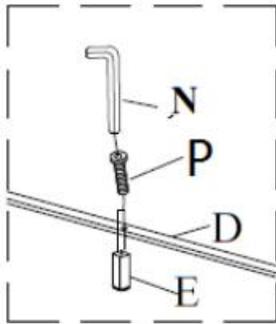


P	Bolt		$\text{Ø}\frac{1}{4}'' \times 1\text{-}1/2''$	8PCS
M	Screw		$\text{Ø}8 \times 3/4''$	4PCS
N	Allen key		M4	1PC

Step 3 : Assembly Slat(F) with Side Rail(C).

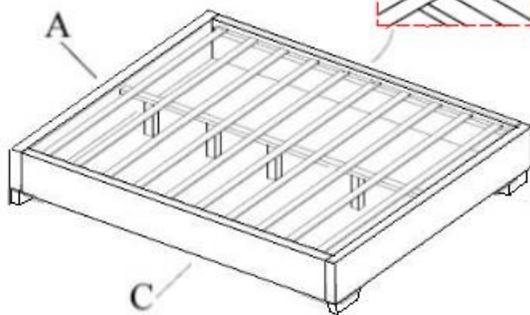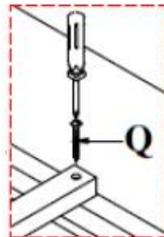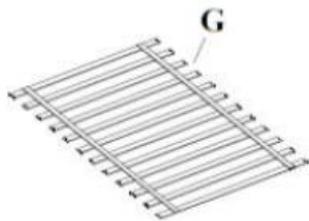

Step 4 : Completed assembly.

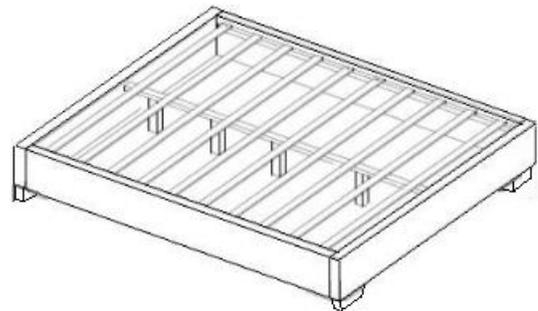

Q	Screw		$\text{Ø}8 \times 2\text{-}3/8''$	24PCS
---	-------	---	-----------------------------------	-------