

ASSEMBLY INSTUCTIONS

Item No : X-QB-761

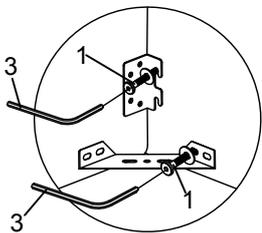
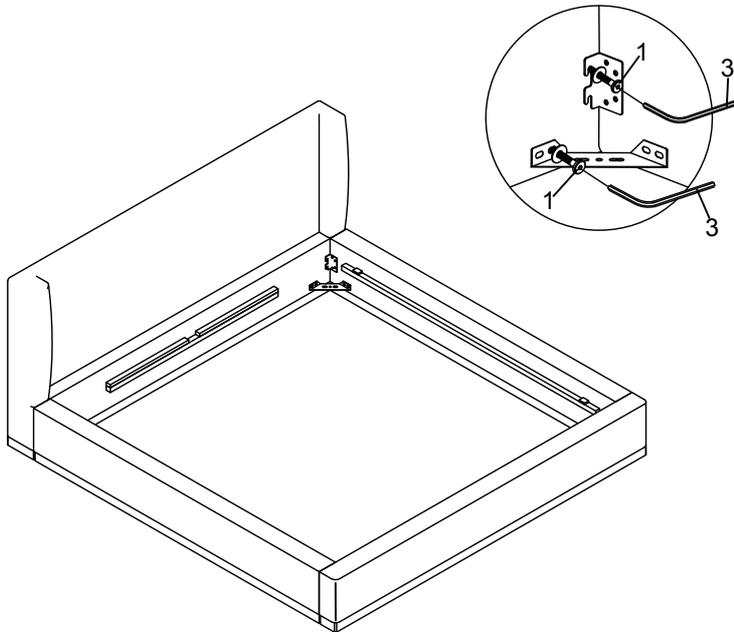
Description : QUEEN BED

Thank you for purchasing this quality product be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment


Step 1:

- A. Assembly Side Rail (C) with HB (A) & FB (B).
 B. Assembly Side Rail Bracket (F), Footboard (B) to Side Rail (C) & Headboard (A) to Side Rail (C) using Bolt (1) and Allen Key (3)

1	Bolt + (Lock & Flat Washer)		M8 x 25mm	24PCS
3	Allen Key		M5	1PC
F	Side Rail Bracket			4PCS






TOOL REQUIRED (Not provided)

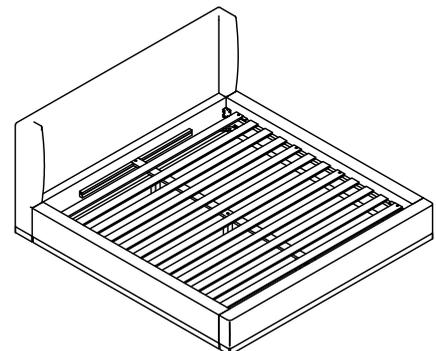
 Phillips Screwdriver

PART LIST:

A	Headboard		1PC
B	Footboard		1PC
C	Side Rail		2PCS
D	Center Wood Support		1PC
E	Support Leg		3PCS
F	Side Rail Bracket		4PCS
G	Slat		12PCS

HARDWARE LIST:

No	Description	Sketch	Size	Quantity
1	Bolt + (Lock & Flat Washer)		M8 x 25mm	24PCS
2	Bolt + (Lock & Flat Washer)		M6 x 35mm	3PCS
3	Allen Key		M5	1PC
4	Allen Key		M4	1PC
5	Screw		M4 x 32mm	14PCS



ASSEMBLY INSTUCTIONS

Item No : X-QB-761

Description : QUEEN BED

Thank you for purchasing this quality product be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment

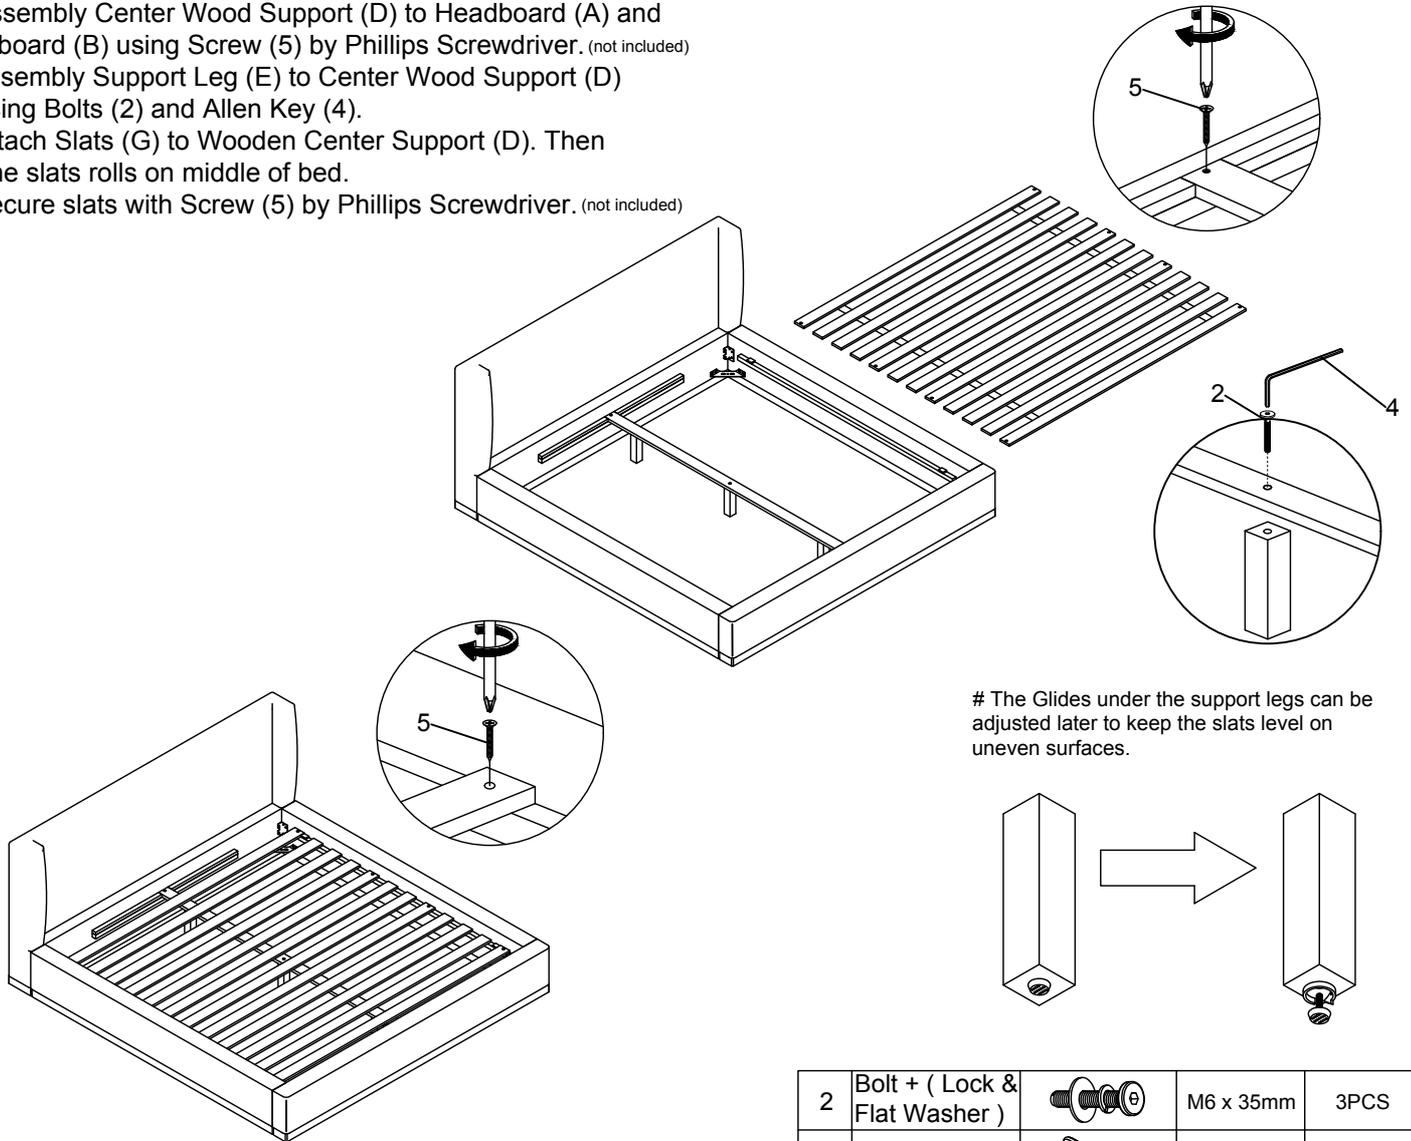
Step 2:


A. Assembly Center Wood Support (D) to Headboard (A) and Foodboard (B) using Screw (5) by Phillips Screwdriver. (not included)

B. Assembly Support Leg (E) to Center Wood Support (D) by using Bolts (2) and Allen Key (4).

C. Attach Slats (G) to Wooden Center Support (D). Then put the slats rolls on middle of bed.

D. Secure slats with Screw (5) by Phillips Screwdriver. (not included)



2	Bolt + (Lock & Flat Washer)		M6 x 35mm	3PCS
4	Allen Key		M4	1PC
5	Screw		M4 x 32mm	14PCS

Step 3: Completed assembly.

