

# ASSEMBLY INSTRUCTIONS

Item No : YQB-609

Description : QUEEN BED



Thank you for purchasing this quality product be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment

## Step1:

A. Assembly side rail (C) with HB (A) & FB (B).

B. Assembly side rail bracket (F), footboard (B) to Side Rails & headboard (A) to side rails (C) using bolt (1) and allen key (4)

1	Bolt + ( Lock & Flat Washer )		M8 x 25mm	24PCS
4	Allen Key		M5	1PC
F	Side Rail Bracket			4PCS

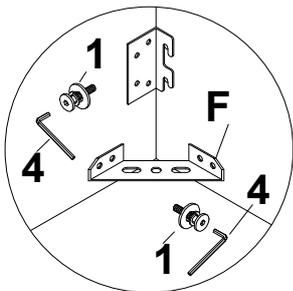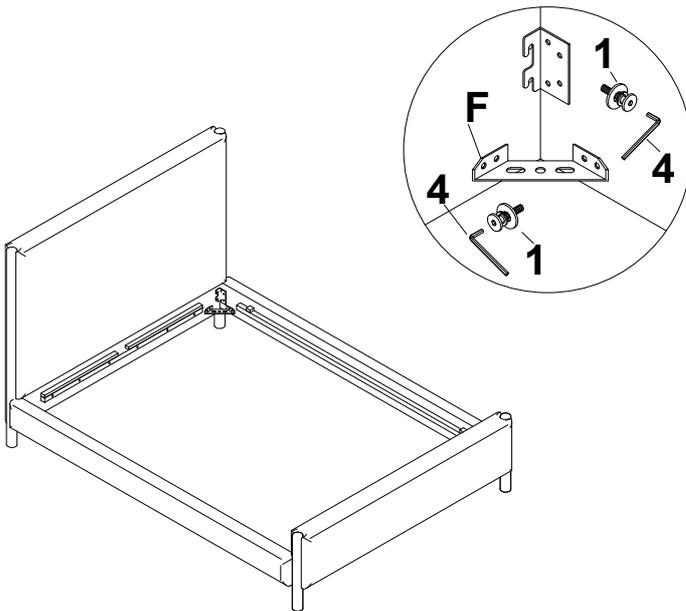

## TOOLS REQUIRED (Not provided)


 Phillips Screwdriver

## PARTS LIST:

A	Headboard		1PC
B	Footboard		1PC
C	Side rail		2PCS
D	Center Wood Support		1PC
E	Support Leg		3PCS
F	Side Rail Bracket		4PCS
G	Slat		12PCS

## HARDWARE LIST:

No	Description	Sketch	Size	Quantity
1	Bolt + ( Lock & Flat Washer )		M8 x 25mm	24PCS
2	Bolt + ( Lock & Flat Washer )		M6 x 35mm	3PCS
3	Allen Key		M4	1PC
4	Allen Key		M5	1PC
5	Screw		M4 x 32mm	14PCS

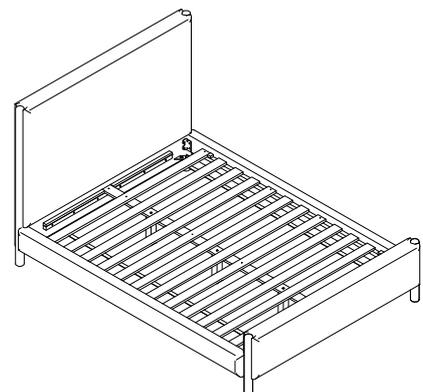

# ASSEMBLY INSTRUCTIONS

Item No : YQB-609

Description : QUEEN BED

Thank you for purchasing this quality product be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment


**Step2:**

**A.** Assembly center wood support (D) to headboard (A) and footboard (B) using screw (5) by philips head screwdriver. (not included).

**B.** Assembly support leg (E) to center wood support (D) by using bolts (2) and allen key(3).

**C.** Attach Slats (G) to wooden center support (D). Then put the slats rolls on middle of bed.

**D.** Secure slats with screw (5) by philips head screwdriver. (not included).

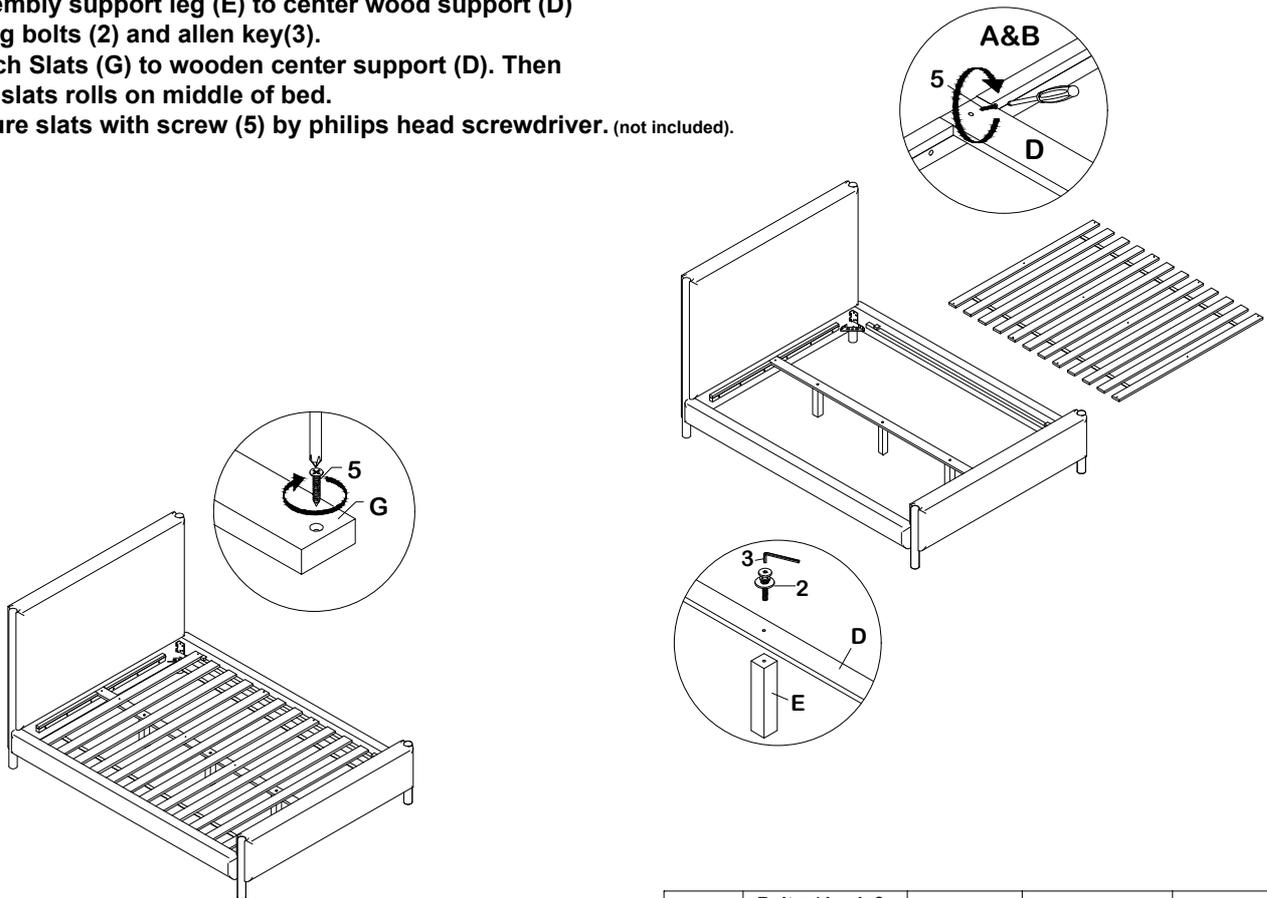

2	Bolt + ( Lock & Flat Washer )		M6 x 35mm	3PCS
3	Allen Key		M4	1PC
5	Screw		M4 x 32mm	14PCS

**Step3: Completed assembly.**

